

This Quick Start Guide describes the basic operations of the CD-01U CD player.

Playable discs

The CD-01U can play back not only commercially available audio CD discs but also CD-R and CD-RW discs. In addition, it can play back MP3 files on a CD-R/CD-RW disc.

Basic playback

1. Press the **POWER** switch to turn on the unit.
 2. Insert a disc to the disc slot.
 3. Press the **▶/||** key on the front panel or **▶PLAY** key on the remote control unit.
The unit starts playback from track 1.
 - To pause playback
Press the **▶/||** key on the front panel or **|| READY** key on the remote control unit.
 - To stop playback
Press the **■** key on the front panel or **■ STOP** key on the remote control unit.
 - To eject the disc
Press the **EJECT** key on the front panel or remote control unit.
-

Selecting a track

From the front panel, use the **SKIP** keys.
From the remote control unit, use the **SKIP** keys or the numeric keys.

To select a track using the numeric keys, specify the desired track number in two digits for an audio CD or in three digits for an MP3 disc. To specify track 4 of an audio CD, for example, press “0” followed by “4”.

Searching the desired position

During playback (or paused), use the **SEARCH** keys to move forwards or backwards while monitoring the cueing sound.

Also, frame accurate jog search is possible by pressing the **SHIFT** key to turn on the indicator and rotating the **PITCH** dial on the front panel, or using the **JOG** (-,+) keys on the remote control unit.

About the shift mode

Many of the front panel controls have “shifted” (secondary) functions. You can use these functions when the **SHIFT** indicator is lit (i.e. in the shift mode).

Pressing the **SHIFT** key switches on or off of the **SHIFT** indicator. Note that the illuminated **SHIFT** indicator does not turn off until you press the **SHIFT** key again.

Playback mode

The unit has four playback modes: normal (continuous), single, program and random.

By pressing the **PLAY MODE** key on the remote control unit, you can select the desired playback mode.

You can also select the playback mode using the front panel **CALL (PLAY MODE)** key while the **SHIFT** indicator is lit.

The currently selected mode is shown on the display.

- Normal mode : no indication
- Single mode : “S”
- Program mode: “PROGRAM”
- Random mode: “RANDOM”

** This quick start guide is written assuming that the unit is in the normal playback mode except as noted.*

Playing back MP3 files

The unit can play back a disc containing MP3 files.

Note that some functions (such as A-B loop, search, EOM, etc.) do not work with an MP3 file.

Menu operation

You can make the following settings via the menu system.

- Key original function on/off
- Eject block function on/off
- Repeat setting
- Program setting
- Fade in/fade out setting
- Relay function setting
- Timer play on/off
- Mono output on/off
- Resume function on/off
- EOM time setting
- Incremental play function on/off
- Pitch step setting
- RS232C baud rate
- Factory preset
- User data on/off

Basic menu operation

1. Enter the menu mode by:
 - pressing the **PITCH** dial on the front panel while **SHIFT** indicator is lit, or
 - pressing the **MENU** key on the remote control unit.
2. Select the desired menu item by:
 - rotating the **PITCH** dial and pressing the **PITCH** dial to confirm the selection, or
 - using the **PREV/NEXT** keys or numeric keys, and pressing the **ENTER** key to confirm this selection.
3. Select the desired option by:
 - rotating the **PITCH** dial, and pressing the **PITCH** dial to confirm the selection, or
 - using the **PREV/NEXT** keys or numeric keys, and pressing the **ENTER** key to confirm the selection.

After confirming the selection, the unit automatically exits the menu mode.

Memo

Note that some menu items need different procedures.

Various functions

In the following description, most operations are carried out using the remote control unit, though you may carry out them also from the front panel.

Auto cue

When the auto cue function is enabled, the selected track pauses at the beginning of the audio on the track so that you can start the music immediately after pressing the **▶** key.

Auto ready

When the auto ready function is enabled, after each track is played back, the unit automatically pauses at the beginning of the next track.

By pressing **A.RDY/INS** key, you can switch on/off of the auto ready function.

Call function

If you press the **CALL** key, the unit returns to the position where playback started last time and pauses.

Incremental play

When the incremental play function is enabled, pressing the **▶** key during playback starts playback of the next track, while pressing the **■** key during playback skips to the next track and pauses.

You can enable or disable the incremental play function using the “**INCR**” menu item (menu 11).

Repeat playback

When the repeat playback function is enabled, the unit repeats playback until you stop. The repeated area depends on the current playback mode (for example, if “**SINGLE**” mode is selected, the unit repeats the current track).

You can enable or disable the repeat function by

pressing the **REPEAT** key.

You can also enable or disable the repeat function using the “**REPEAT**” menu item (menu 03).

A-B repeat playback

You can play back the desired portion (between points A and B) on a track repeatedly by the following procedure.

1. When the repeat playback function is disabled, during playback, press and hold down the **REPEAT** key until “**REPEAT**” on the display starts flashing.
2. Press the **REPEAT** key at the beginning of the desired portion.
The “A” point is set.
3. Press the **REPEAT** key at the end of the desired portion.
The “B” point is set and the unit automatically starts repeat playback between the A and B points.

To stop A-B repeat, press the ■ key.

Tip

You can also carry out A-B repeat playback using the “A-B” option of the “**REPEAT**” menu item (menu 03).

Program playback

Using the program playback function, you can play back the desired tracks in the desired order.

Creating the program

1. While stopped, press the **PGM** key.
The display shows the program setting screen.
The number on the right shows the program number.
2. Use the numeric keys or **SKIP** keys to select the desired track you want to set to the current program number.
3. Press the **SEARCH ►►** key.
The selected track is set and the display

shows the next program number.

4. Repeat steps 2 and 3 above as many times as needed.
5. When you finish creating the program, press the **PGM** key to exit the program setting mode.

To replace a programmed track:

1. On the program setting screen, use the **SEARCH** keys to select the program number to which the track you want to replace is set.
2. Use the numeric keys or **SKIP** keys to select the desired track with which you want to replace the current track.
3. Press either of the **SEARCH** keys to confirm the setting.

To add a track:

1. On the program setting screen, use the **SEARCH** keys to select the program number to which you want to add a track.
2. Press the **A.RDY/INS** key.
3. Use the numeric keys or **SKIP** keys to select the desired track.
4. Press either of the **SEARCH** keys to confirm the setting.

To delete a track:

1. On the program setting screen, use the **SEARCH** keys to select the program number to which the track you want to delete is set.
2. Press the **A.CUE/DEL** key.

Intro check

Using the intro check function, you can hear the beginning ten seconds of each track one after another.

To enable the intro check function, press the **INTRO CHECK** key to turn on “**INT**” on the display.

Mono output

You can output the analog and digital signals from the unit in mono.

To enable or disable the mono output function, use the “**MONO**” menu item (menu 08).

Timer play (Power on play)

The timer play function allows you to automatically start playback of the unit when an external timer turns on the unit.

To use the timer play function:

1. Connect a timer between the unit and an AC outlet.
2. Set the desired CD to the unit.
3. Set the “**TIMER**” menu item (menu 07) to “**ON**”.
4. Turn off the power using the timer.
When the external timer turns on the unit, it automatically starts playback.

Pitch control

From the front panel, you can turn on or off the pitch control function by pressing the **PITCH** dial (while the **SHIFT** indicator is unlit) and change the pitch (speed) by rotating the **PITCH** dial.

You can turn on or off the pitch control function using the **PITCH** key. When on, use the -/+ keys to change the pitch (speed).

The pitch control steps can be selected using the “**PITCH**” menu item (menu 12).

Key original

The key original function allows you to fix the pitch when the pitch control function is active. That is, the pitch control only changes the speed. To enable or disable the key original function, use the “**KEY-O**” menu item (menu 01).

Time display selection

Using the **DISPLAY** key, you can select the time mode on the display from the following:

- Track elapsed time
- Track remaining time (“**REMAIN**” is lit on the display)
- Disc remaining time (“**T REMAIN**” is lit on the display)

Fade in/out

You can make fade-in or/and fade-out playback. To set the fade in/out function, use the “**FADE**” menu item (menu 05).

In this menu item, selecting “**ON**” enters the fade-in setting mode. You can select between 0 to 10 seconds of fade-in time (selecting “0” means the fade-in function is disabled). Confirming the fade-in setting automatically enters the fade-out setting mode. You can set the fade-out time as with the fade-in time. Confirming the fade-out setting exits the menu mode.

Eject block

By setting the eject block function to **ON**, the **EJECT** key is disabled while the unit is playing or paused.

Use the “**BLOCK**” menu item (menu 02) to enable or disable the eject block function.

Relay play

You can automatically start playback of the unit immediately after another CD-01U stops playback, or vice versa.

To enable the relay play function, connect between the **RELAY IN** and **RELAY OUT** jacks of the two CD-01U each other using a cable with mini phone plugs on both ends, and set the “**RELAY**” menu item (menu 06) on each unit to “**ON**”.

TEAC CORPORATION

Phone: +81-422-52-5082
D00882400A

3-7-3, Nakacho, Musashino-shi, Tokyo 180-8550, Japan

Printed in China